

# *MicroStation Descartes*

## *User's Guide*

### *Table of Contents*

---

#### **1. Introduction**

- About This Guide 1-1
- Before You Begin 1-2

#### **2. MicroStation Descartes Overview**

#### **3. Fundamentals**

- How to Start MicroStation Descartes 3-1
- MicroStation J Support 3-1
- MicroStation Descartes User Interface Conventions 3-1
- MicroStation Descartes Main Menu 3-2
- Workspaces 3-3
- Tool Frames and Tool Boxes 3-3
- MicroStation Descartes Projects 3-4
  - Managing Project files 3-5
  - Attaching a project to a design file 3-7
- Managing groups of images with projects 3-9
- Copy Project 3-9
  - Copy Project dialog box 3-10
- Supporting Raster Reference Files 3-13
- Managing and Selecting Files 3-14
- Image File Type Issues 3-16
- World File Support 3-17
  - Why Use WorldFiles? 3-17
  - Naming Convention 3-17

- Color Table Concepts in HMR Images 3-19
- Settings Preferences 3-20
  - Image Manager - Environment Variable for Open Image Path 3-23

#### **4. Navigating MicroStation Descartes**

- Loading and Starting MicroStation Descartes 4-1
- Image Manager Menu Structure 4-3
- Image Manager File menu 4-7
- Image Manager File > Project sub menu 4-11
- Image Manager Edit menu 4-13
- Image Manager Display menu 4-15
- Image Manager Settings menu 4-17
- Image Manager Tools menu 4-20
- Image Manager Utilities menu 4-28
- Image Manager Help menu 4-30

#### **5. Displaying Images with Image Manager**

- Overview 5-1
- Image Manager dialog box 5-3

## Table of Contents

---

Managing image lists 5-4  
  Assigning one view to the list box 5-4  
  Applying a list of images to other views 5-5  
  Contrast/Brightness controls 5-5  
  Opening images 5-6  
  Creating new images 5-6  
  Selecting images 5-6  
  Choosing the active image 5-8  
  Moving images forward or backward 5-10  
  Turning images on or off 5-12  
  Inspecting or editing image properties 5-12  
  Fitting images to a view 5-14  
  Displaying an image in full resolution 5-15  
  Saving images 5-15  
  Closing images 5-16  
New Image dialog box 5-17  
Open Images dialog box 5-19  
Save As dialog box 5-25  
Image Location Editor dialog box 5-27  
View Image Attributes dialog box 5-30  
Image Control tool box 5-33  
Image File tool box 5-35

---

## 6. Enhancing Images

Overview 6-1  
Histogram Display dialog box 6-2  
Image Channels dialog box 6-3  
Color Table Editor dialog box 6-5  
Contrast Stretch dialog box 6-7  
Density Slicing dialog box 6-10  
Color Compression dialog box 6-14  
Transparent Colors dialog box 6-18  
Translucent Colors dialog box 6-20

---

## 7. Transforming Images

Overview 7-1  
Local Transform tool box 7-2  
Image Transform tool box 7-10  
  Output Image Creation dialog box 7-24

---

## 8. Registering Images and Vector Data

Warping Images with Register 8-1  
Transformation Models 8-2  
  Concepts 8-2  
  Building a Model 8-3  
  Standard Registration Transformation Models 8-4  
  Image Resampling 8-5  
  Vector Resampling 8-6  
  Register dialog box 8-6  
  Register tool box 8-20  
  Register File tool box 8-25  
  Resampling File tool box 8-27  
  Resampling dialog box 8-28

---

## 9. Mosaicing Tools

Mosaic Tool Box 9-1

---

## 10. Preparing and Managing Color Filters

Overview 10-1  
Color Filter tool box 10-2  
Color Filter File tool box 10-4  
Color Filter dialog box 10-5

## Table of Contents

---

---

### 11. Editing Images

- Overview 11-1
- Paint tool box 11-2
- Erase tool box 11-4
- Stamp Vector tool box 11-6
  - Stamping into two-color images 11-6
  - Stamping into 256 color images 11-7
  - Automated Vector Stamping Settings 11-7
  - Solving Color Conflicts 11-7
- Stamp in a New File dialog box 11-11
- Clean Up tool box 11-20
- Copy/Paste tool box 11-23
- Undo tool box 11-24

---

### 12. Preparing Theme Symbolology

- Overview 12-1
- Definitions 12-3
- Theme tool box 12-4
- Theme File tool box 12-5
- Theme Styler dialog box 12-6
- Hatch Editing dialog box 12-16
- Pattern Editing dialog box 12-18
- Update Design File dialog box 12-19

---

### 13. Vectorizing

- Overview 13-1
- Concepts 13-3
  - Nodes 13-3
  - Other Break Points 13-3
  - Generalization 13-4
  - Raster Lines or Outlines 13-4
- Vectorize tool box 13-7

- Erasing Raster while Vectorizing 13-27
  - Vectorize Tools Supporting Raster Erase 13-28
- The Node File tool box 13-29
- Vectorize Settings dialog box 13-30
- Vectorize Functions assigned to Function Keys 13-43

---

### 14. Converting Text and Cells from Raster to Vector

- Overview 14-1
- Text/Cells tool box 14-1

---

### 15. Converting Image Formats

- Batch Conversion dialog box 15-1
- 8bit RLE 15-4
- CALS 1 File Support 15-4
- GeoTIFF Support 15-4
  - Georeferencing and Geocoding Support 15-5
  - GeoTIFF Conversion Options dialog box 15-6
  - GeoTIFF Image Location Editor dialog box 15-7
  - GeoTIFF Related Key-ins 15-7
- Image File Formats Table 15-10

---

### 16. Image Draping

- Introduction 16-1
  - Draping and Rendering 16-1
  - 3D surface 16-1
  - Integration with rendered objects 16-2
- Associating a MicroStation Descartes Images to a 3D Surface 16-2
  - Overview of a Draping Process 16-3

## Table of Contents

---

---

### 17. Plotting, Printing and Publishing Images

- Overview 17-1
- Enhance 24bit Color Compression and Dithering 17-4
- Copy Project 17-4
- Publish To Viewer 17-4
  - Publish to Viewer dialog box 17-4
  - Using Publish To Viewer 17-9
- Descartes Plotting dialog boxes 17-11
- Plotting under MicroStation 5.5.x for Windows 17-15
- Plotting under MicroStation 5.5.xx for DOS 17-16
- Additional Information About Configuration Plot Files 17-17
- Printing/Plotting Quick Reference 17-20

---

### 18. Customizing MicroStation Descartes

- About Customization 18-1
- Customizing the Workspace 18-3
- CAD Overlay Workspace 18-3
  - CAD Overlay Image Menu 18-3
- Programming with BASIC macros 18-13
- Programming with MDL 18-15

---

### 19. Installing MicroStation Descartes To Run from a Network Server

- Installing MicroStation Descartes on a Network Server 19-1
  - Installing MicroStation Descartes on a Network Client 19-2
  - Running MicroStation Descartes from a Network Server and/or Client 19-3

---

### 20. MicroStation Descartes as a MSI Client

- Introduction 20-1
- Installing the MSI Client for MicroStation Descartes 20-2
- Configuring MicroStation Descartes to Access a MSI Server 20-2
  - Setting up the servers 20-3
  - Configuring Cache Memory 20-6
- Opening Images on Remote MSI Server(s) 20-9
- Converting a Remote Image - Batch Conversion and/or Save As 20-10
- MSI Server Failures 20-11

## Table of Contents

---

---

### Appendix A. MicroStation Descartes Key-in Tables

- Overview A-1
- New Key-ins in MicroStation Descartes  
Version 7 A-1
- MicroStation Descartes Key-ins A-1
- New Key-ins in MicroStation Descartes  
Version 7 A-5
- MicroStation Descartes Key-ins A-47
  - Project Key-ins A-47
  - Image Edit Key-ins A-52
  - Image Manager Key-ins A-93
  - Image File Formats A-120
  - Register Key-ins A-122
  - Theme Key-ins A-144
  - Image Transform Key-ins A-171
  - Vectorize Key-In A-176
  - Generic Plot Key-ins A-191
  - PostScript Plot Key-ins A-194
  - RTL Plot Key-ins A-198

---

### Index

---

### Title Page

---

### Trademark Page